


Easy Fit Double-Seal Box Gutter Fitting Instructions



1 Place internal jointer inside the box gutter. For now, slide it away from the joint as this will be sealed later.



2 Put 2 lines of silicone sealant approx. 1/3 of the width from each edge of the external jointer.

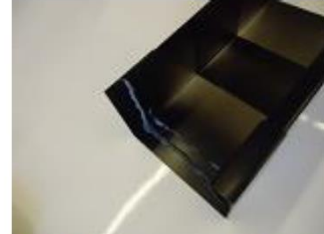

3 Feed the external jointer onto the gutter approx. half way along the width of the jointer.



4 Slide the next gutter into the external jointer leaving a 5-8mm gap between the gutters. Smooth off the sealant in the centre.



5 Place a bead of sealant approx. 40mm to the left of the 5-8mm gap. Move the internal jointer across this bead of sealant.



6 Place another bead of sealant approx. 40mm to the right of the 5-8mm gap. Move the jointer back across this bead of sealant and align the centre of the internal jointer on top of the 5-8mm gap.



7 Ensure that sealant is showing on all sides of the internal jointer (add extra sealant if there are gaps).



8 Smooth off the sealant with your finger.

Alternative fixing options

Internal jointer only

Only use the internal jointers and discard the external jointers.

External jointer only

Only use the external jointers and discard the internal jointers.